




Typical UK Underground Electric / Fibre Optic Installation and use of Underground Protection Products

1. Open Trench



2. Placing of Duct

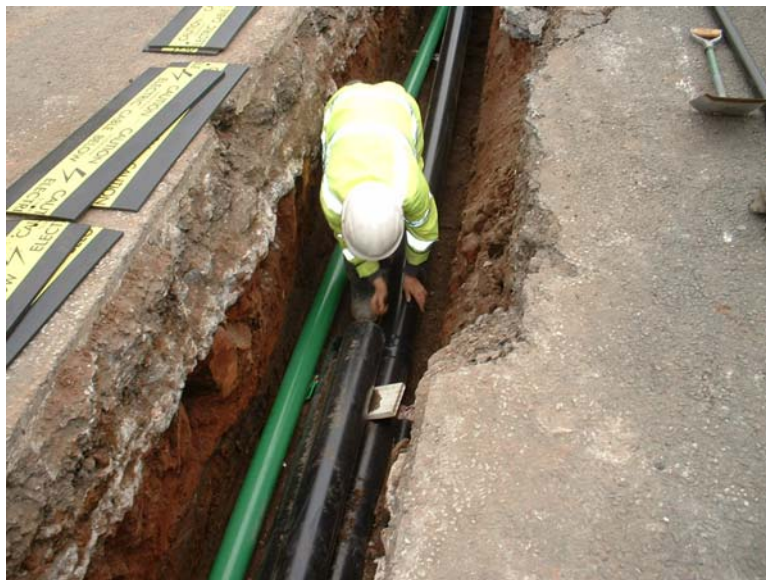

Centriforce Products Limited
14-16 Derby Road
Liverpool
L20 8EE UK
www.centriforce.com

3. Pour layer of sand



4. Flatten sand layer





5. Place Stokbord® cable covers



6. Use pre-supplied pegs to fix



Centriforce Products Limited
14-16 Derby Road
Liverpool
L20 8EE UK
www.centriforce.com

7. Add layer of sand / aggregate



8. Place warning tape and make up to road surface

